STARSONIC®

skyphone

Wireless Skype Phone
SKYPE

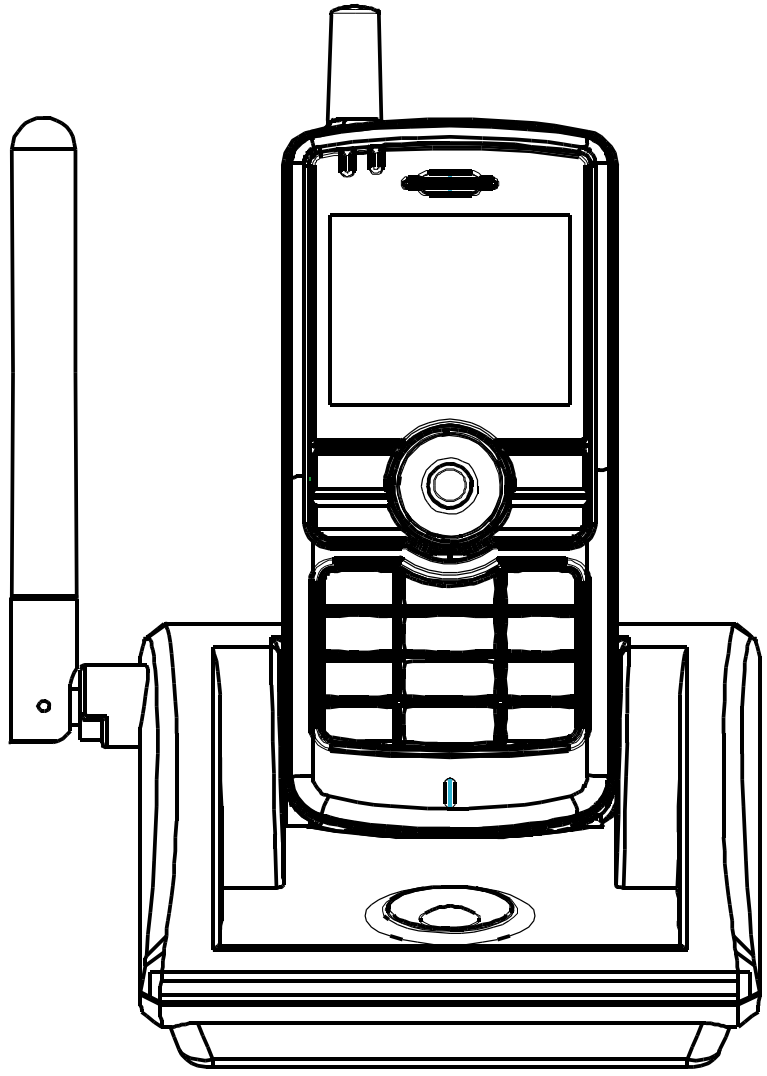

TS - 106

User Manual

STARSONIC CORPORATION

STARSONIC®

skyphone

Contents

Standby mode-keys illustration 2
Talking mode-keys illustration 3
Stereo mode-keys illustration 4

■ Standby mode 5
1.power on 5
2.skype phone call 6
2-1.pc to pc 6
2-2.pc to phone 8
3.hung up/reject call 8
4.check history 9
5.power off 10

■ Talking mode 11
1.mute-mic mute/headset mute 11
2.voulme control 12
3.hung up/reject call 13
4.return 14

■ Stereo mode 15
1.music pause and play key 16
2.previous/next music switch over keys 17
3.incoming call in stereo mode 18
4.choice of answering 19

Choice of hanging off 20

The elimination of common question asked 21

Frequency adjusting 22

Nstallation and Operating System Announcements 23

Dear customers:

Thank you for your choice of Ts106 digital wireless skype phone. To use TS106 wireless skype phone, you may enjoy the high confidentiality and to prevent your privacy from other people listening. 95 automatic frequency-hopping communication channels would let you free of disturbance, having the high quality transmission of conversation as well as high quality stereo sound .

The fitting attached

USB Transformer	USB cable	Rechargeable batteryLithium (520mAH)	Disc driver	Battery cover	User Manual
1 unit	1 unit	1 unit	1 unit	1 unit	1 unit

The charger base (Dongle) installment

In order to achieve the longest communication distance as well as the best quality of conversation,

The following installment locations of charger base are recommanded

- **Keep the Skyphone away from electromagnetic equipment (such as: TVs, microwave oven, Hi-Fi vedio game etc.)**
- **The communicating range should be in the centre of spacious high place free from obstacle**
- **The USB connection support the main electric power for the main engine , please guarantee the USB connection in the normal state.**

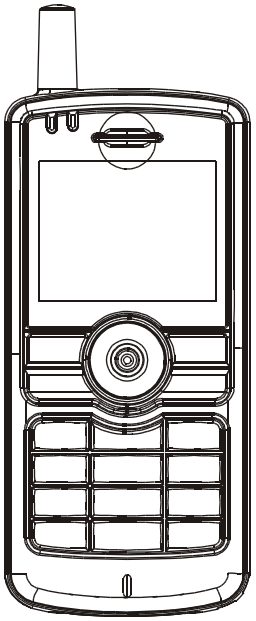

Battery

It contains lithium battery. Please charge the handset on the charger base.
Please charge the battery at least 4 hours at initial use to increase the potency

Battery warning

Please read the following instructions carefully
in order to avoid the potential accident or fire .

1.Please use the rechargeable battery assigned
2.Please do not use battery which is unchargeble.
3.Please do not throw the battery into the fire, or it will have the possibility to cause explodes. Please send the abandoned battery to the environmental protection recycling station to recycle, don't throw it about.
4.Please do not strike or attempt to disassemble the battery, or it will cause the toxic electrolyte to leak. In that case, it will lead to burns or corrodes the flesh.
5.Please keep the battery away from the conductive goods such as earring, keys and so, otherwise It willcause Super heat to burn.

Please follow this instructions to recharge the battery within the limit time and the specifications.

Standby Mode - Keys illustration

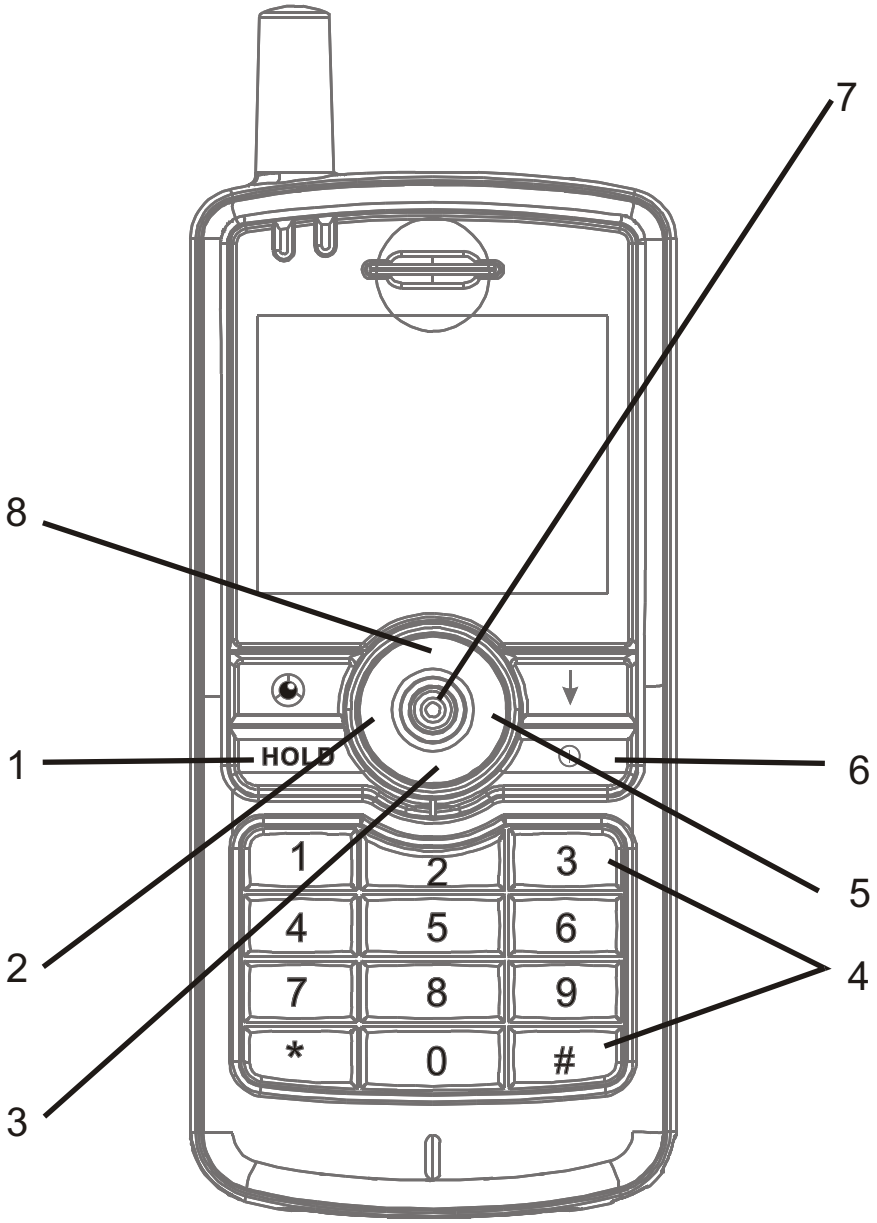

1 DIALING / HOLD-UNHOLD-SWITCH
2 PHONE LIST/ MIC MUTE
3 VOL- DOWN
4 NUMBER KEY EXTENT
5 HISTORY CALL / VOL MUTE
6 HAND OFF / POWER OFF
7 BACK SPACE /CHANGEMODE/
8 VOL- UP

receiving terminal

Keys Illustration (Remote side)

Talking mode
push long mode
Standby mode

Talking Mode - Keys illustration

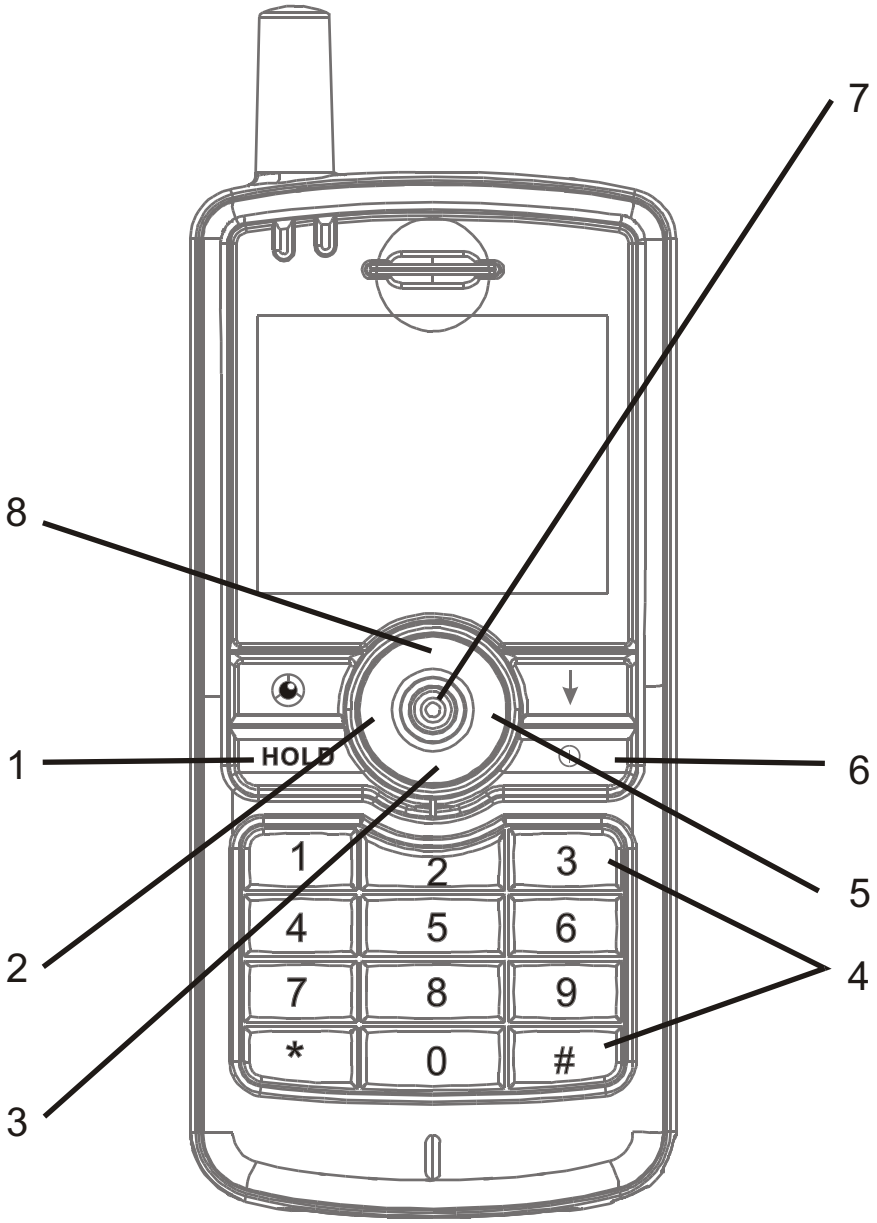

1 DIALING / HOLD-UNHOLD-SWITCH
2 PHONE LIST/ MIC MUTE
3 VOL- DOWN
4 NUMBER KEY EXTENT
5 HISTORY CALL / VOL MUTE
6 HAND OFF / POWER OFF
7 BACK SPACE /CHANGEMODE/
8 VOL- UP

receiving terminal

Keys Illustration (Remote side)

Talking mode
push long mode
Standby mode

Stereo Mode - Keys illustration

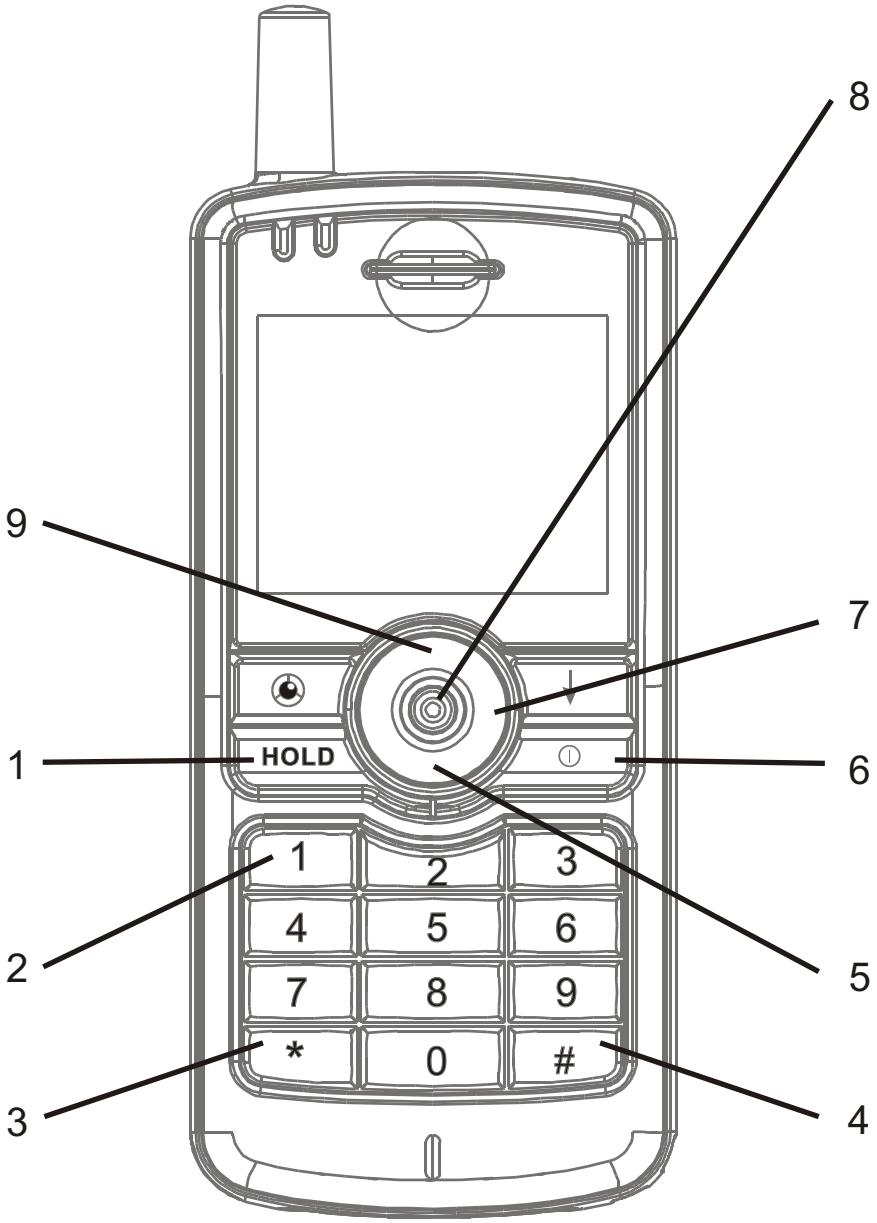

1 **DIALING / HOLD-UNHOLD-SWITCH**
2 **PLAY / PAUSE**
3 **PREV**
4 **NEXT**
5 **VOL-DOWN**
6 **HAND OFF / POWER OFF**
7 **MUTE**
8 **STOP / CHANG MODE**
9 **VOL-UP**

receiving terminal

Keys Illustration (Remote side)

Stereo mode
push long mode
Standby mode

■ Standby mode

1.Power on:

Press the Hand ON/OFF around 3 seconds. The screen will turn on.

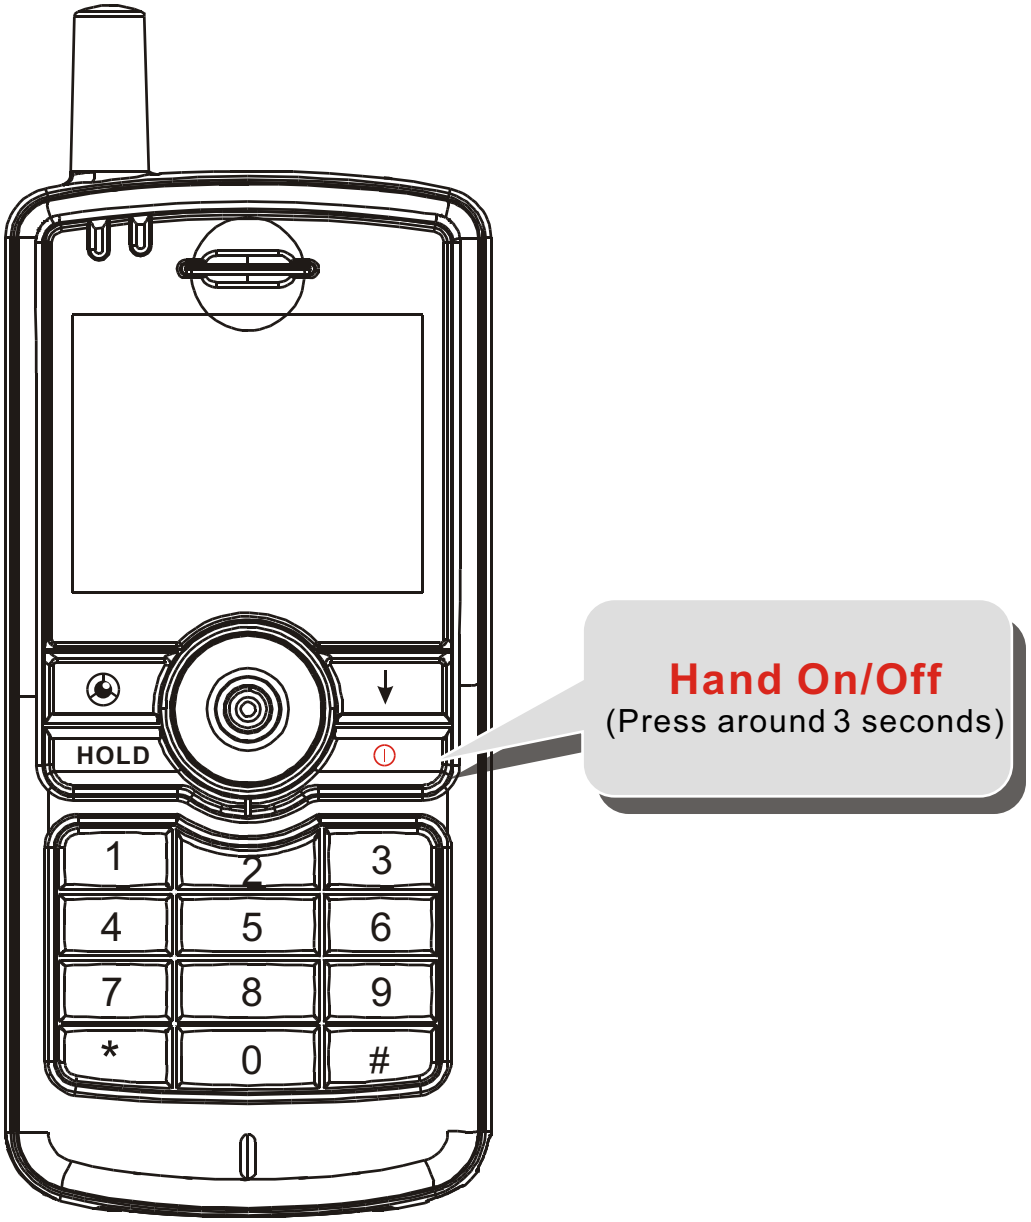

2. Skype phone call

2-1 PC to PC

1. Press the “Phone List” around 3 seconds then the green LED will turn on.
   Now, the Remote had connected to Dongle.
   The LCD panel will be able to show your contact list .

2. Skype phone call

2-1 PC to PC

2.Checking contact list :

Press the Up key to move Up

Press the Down key to move down

Find the name of people you want to talk, just press “hold” to dial.

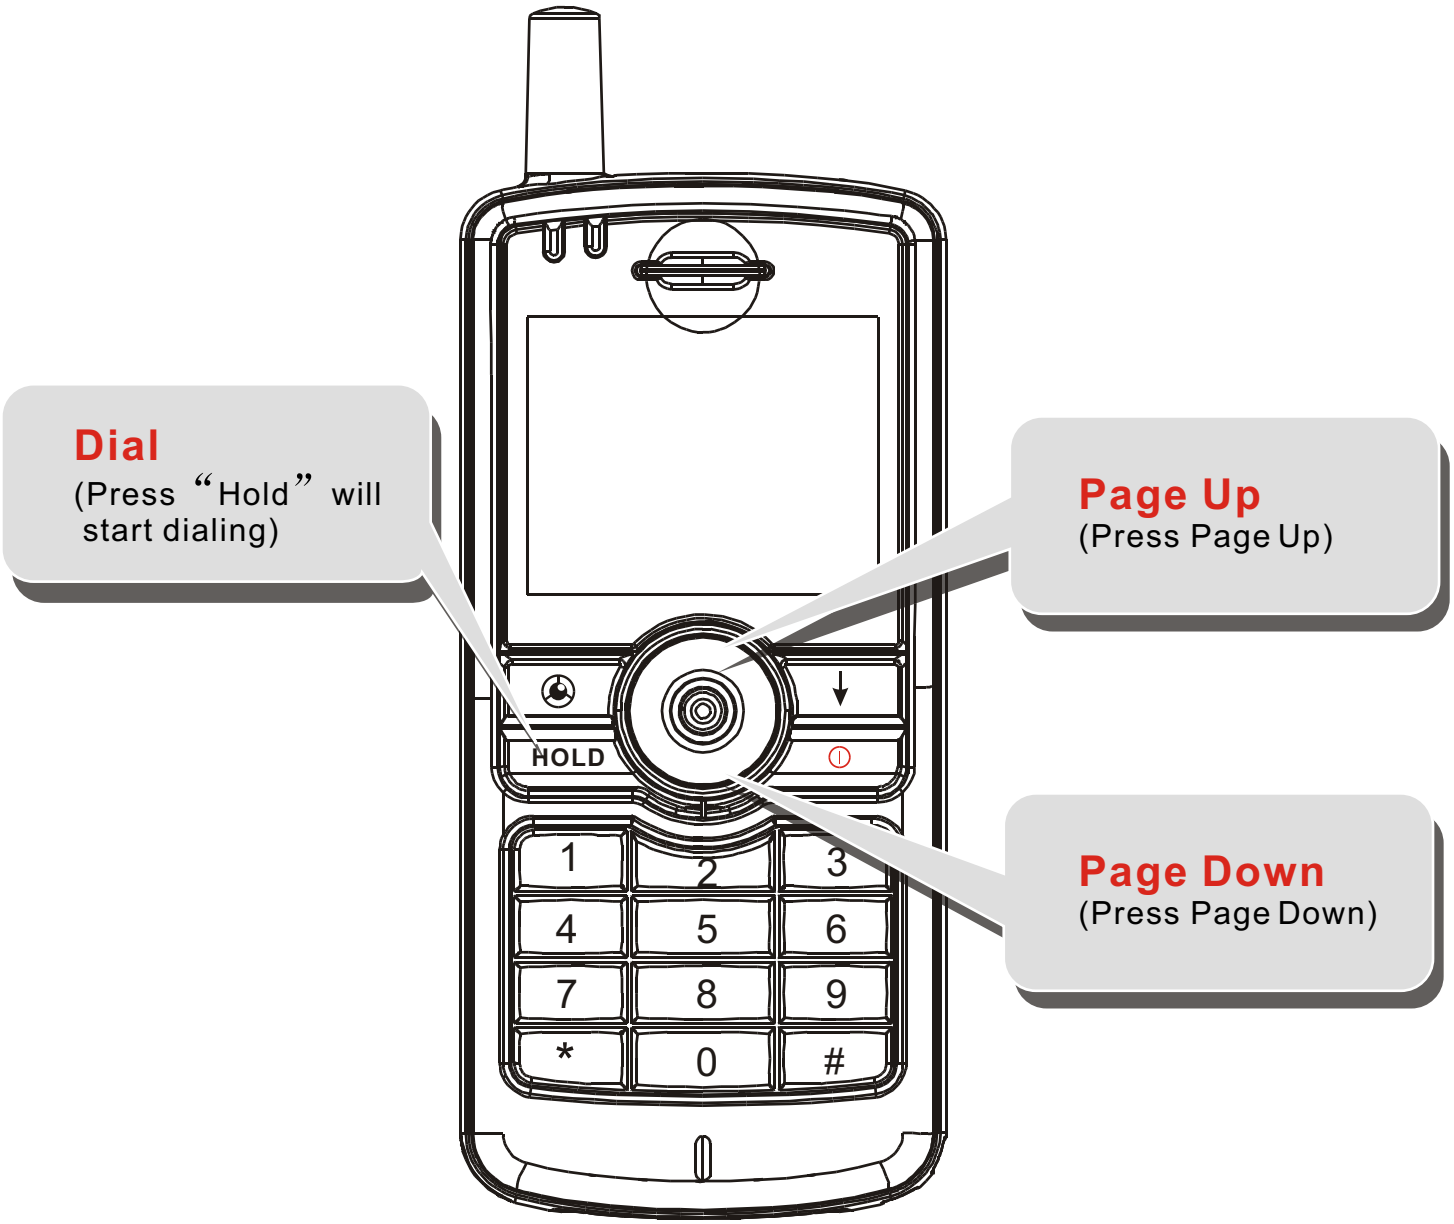

2. Skype phone call

2-2 PC to PHONE

Key in the telephone number you want to call then press the "Dial"

Dial Method

00 or +	Country code	Area code	Phone number

Example1 Domestic call

+	886	2	27001111
or 00	886	2	27001111

Example2 Mobile call

+	886		932111222
or 00	886		932111222

Please skip the first 0 of area code or mobile phone.
Press "0" Button around 2 seconds will be show "+"

PS. listing Skype out function need to purchase from Skype website first.

3. Incoming call

Press "Dial" to receive any incoming call.

4. Check History

Same interface as the call record on your PC.

Keep with skype history record, first to press right of "**phone list**" ;
Page up to going up the list, Page down to going down the list.

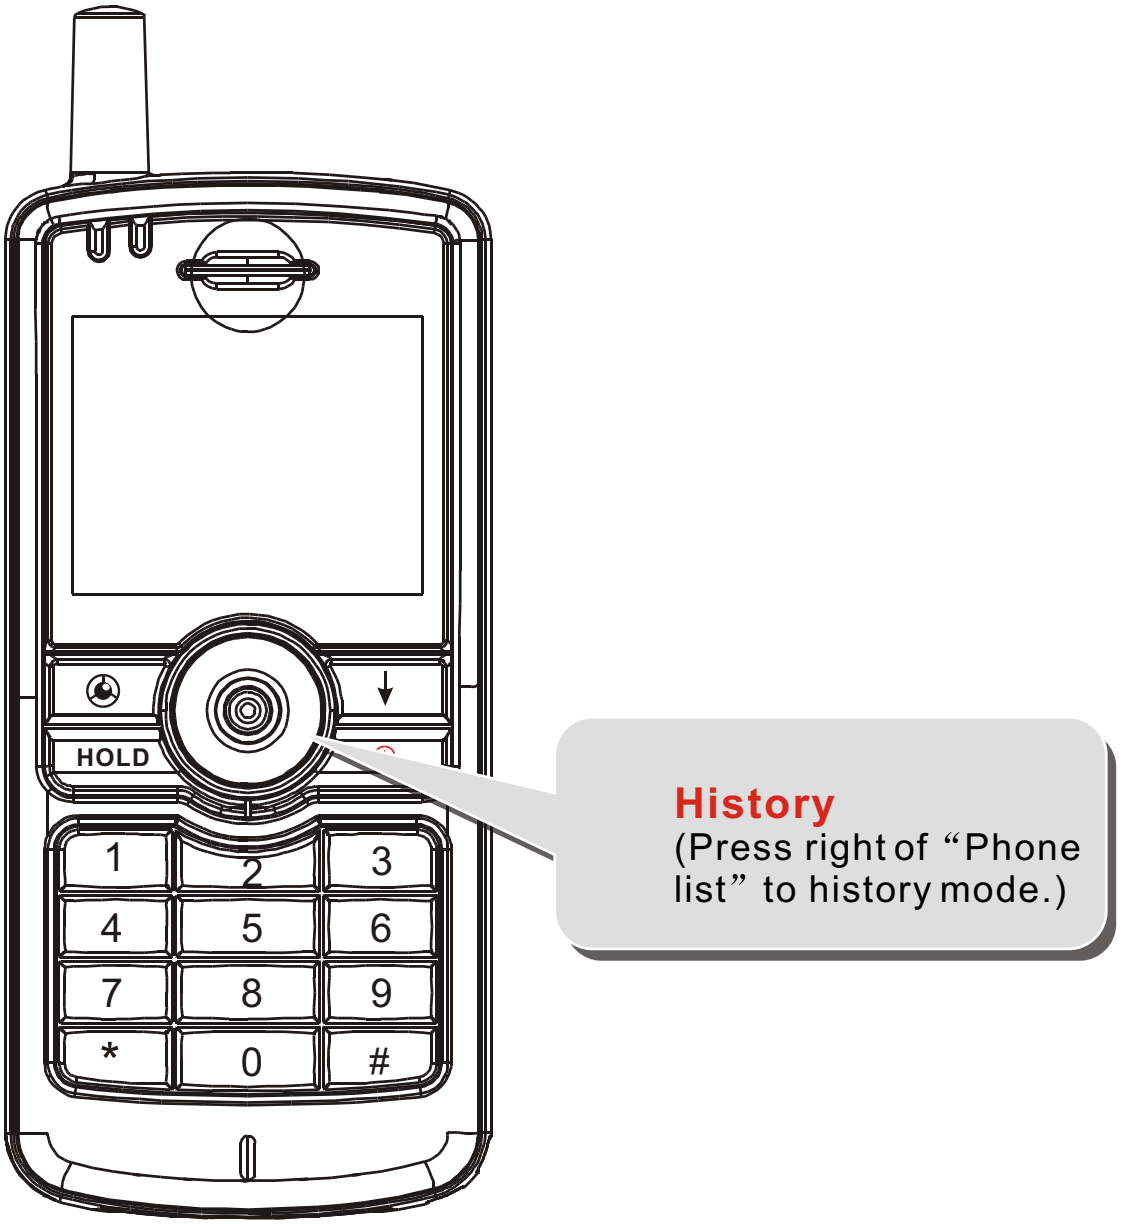

Also can check from "Dial" key for history.

5. Power Off

Press the "Hand OFF/ON" around 3 seconds will be power off.

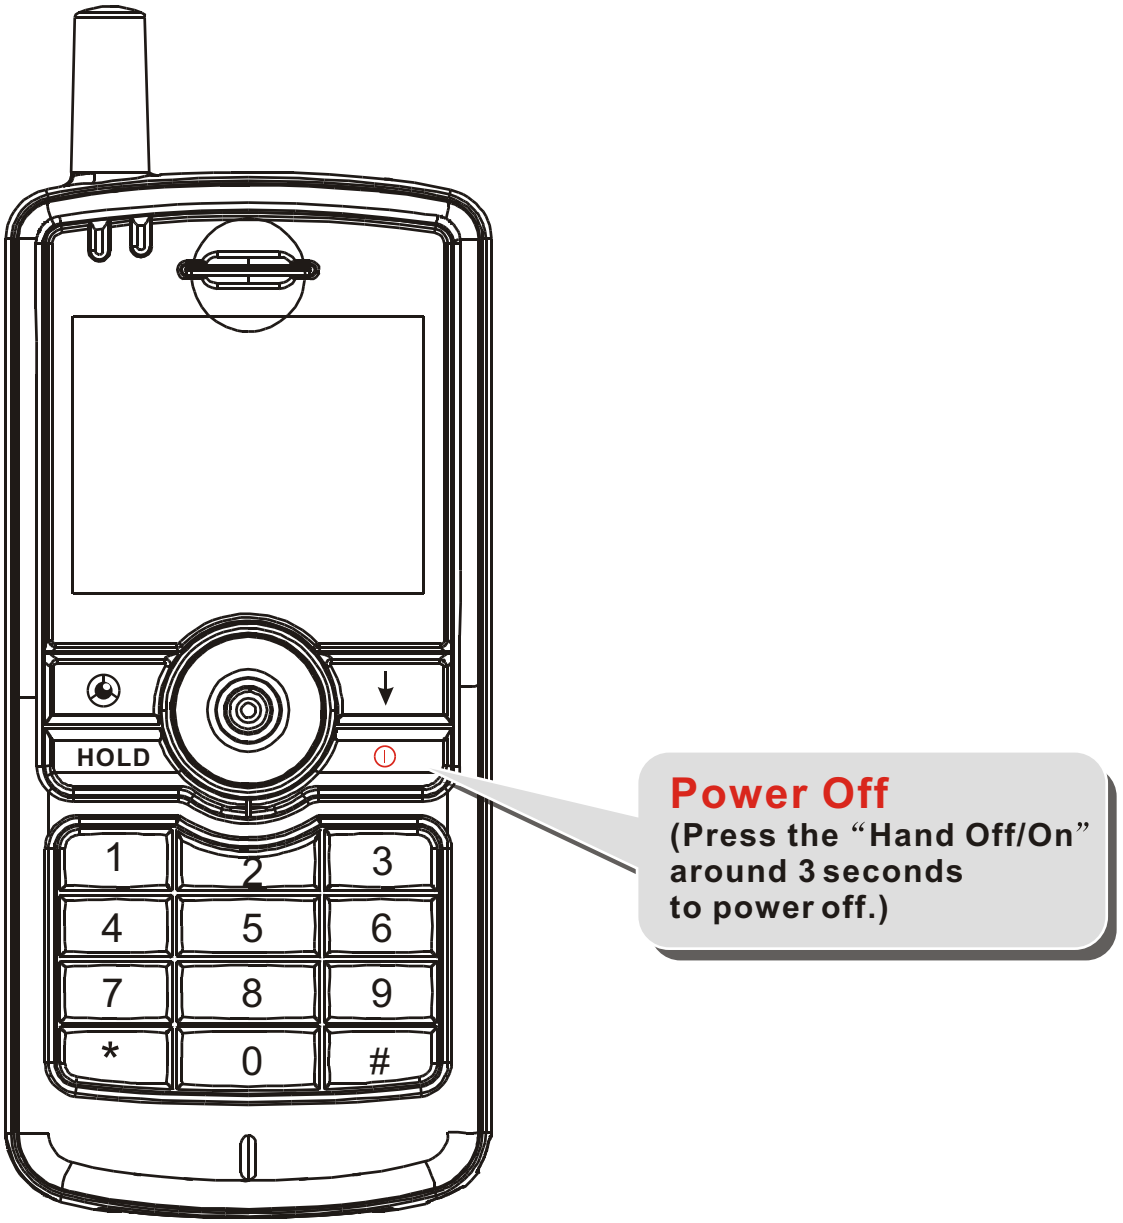

■ TALKING MODE

1. Mute - mic mute/headset mute

Microphone mute function can be used when need to wait during conversation

press left of "Phone list" to mic mute, press once again to return.
press right of "Phone list" to headset mute, press once again to return.

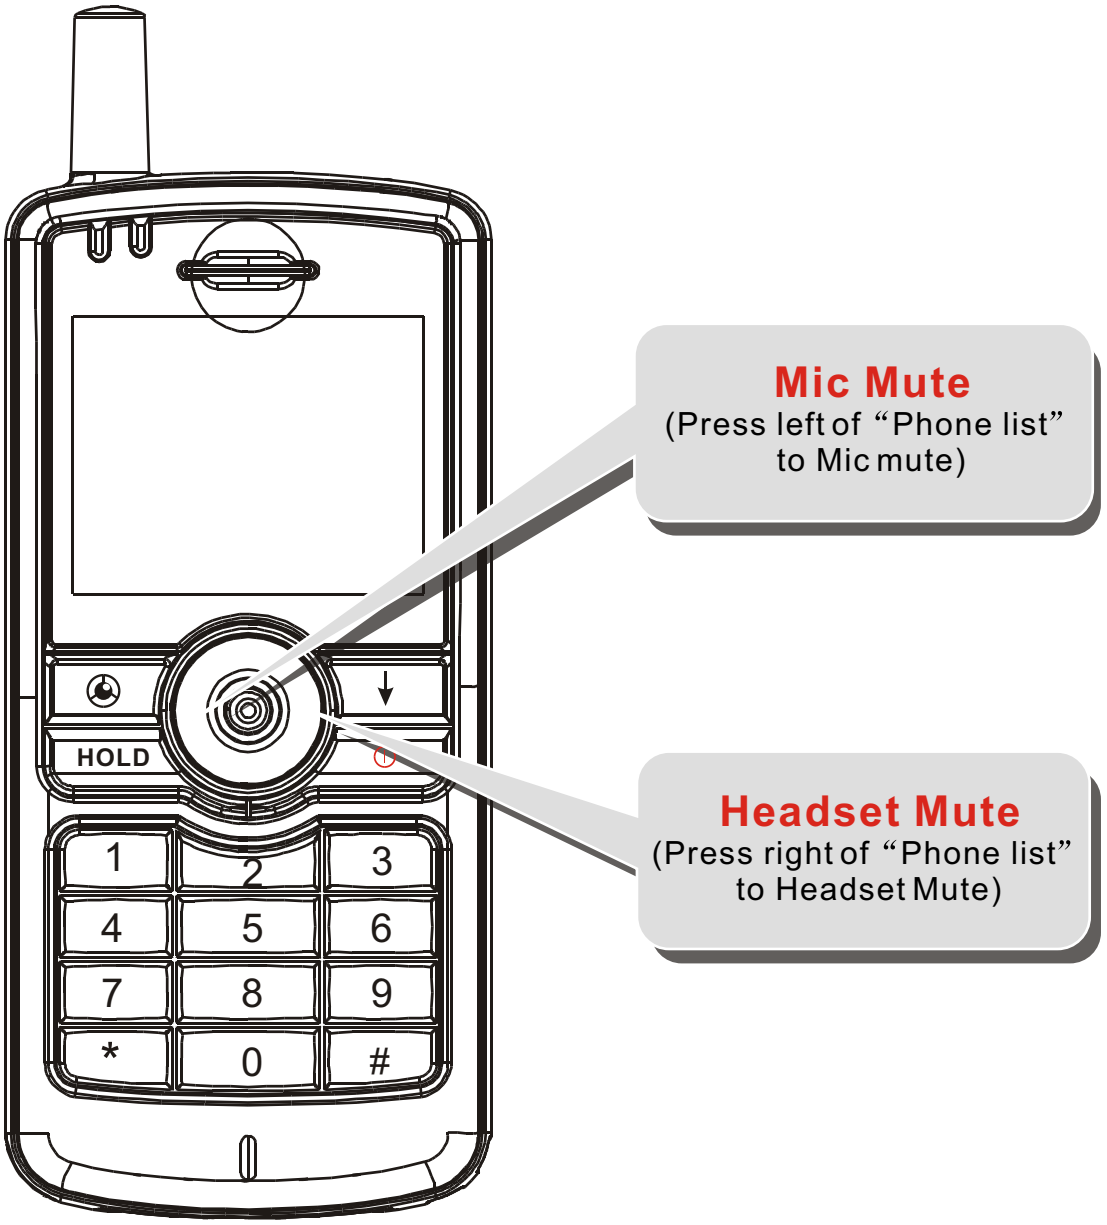

2. Volume control

“VOL Up” Increase VOL

“VOL Down” Decrease VOL

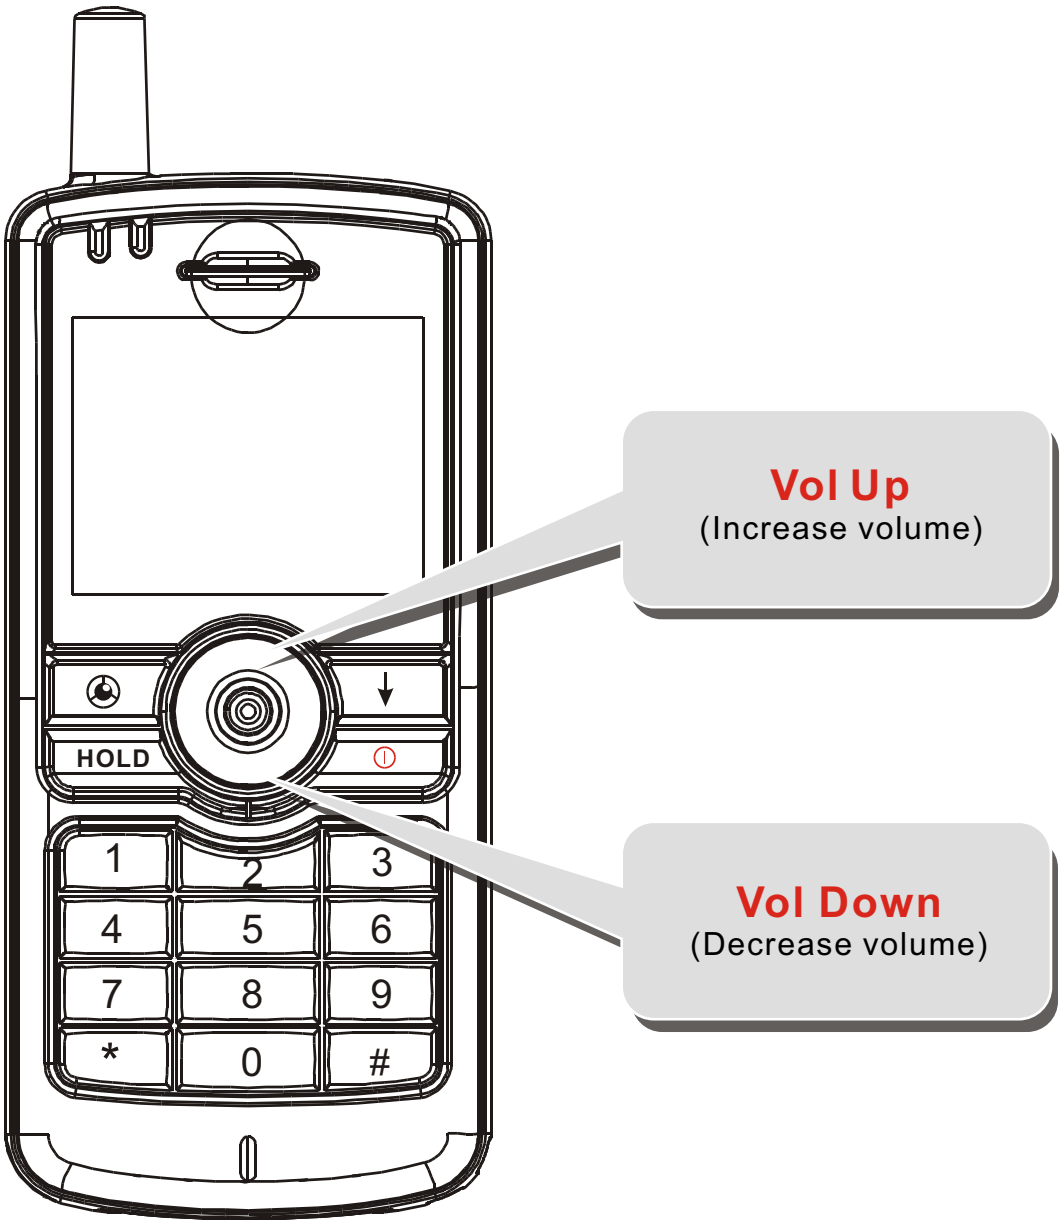

3. Hung Up/Reject call

Press "Hand Off/On" to Hung up or reject call.

4.return

The System will enter Standby Mode with LED Flashing if no keys ear pressed for over 30 seconds.
You can press any key to return working mode.

The system will not enter into standby mode on stereo mode.

■ Stereo Mode

Press "five-direct" key for 3 seconds, the telephone icon on the LCE will switch to show the "Stereo Mode" sign.
The system will connect to your PC "Media Player" and ready to play the stereo music stored in your PC

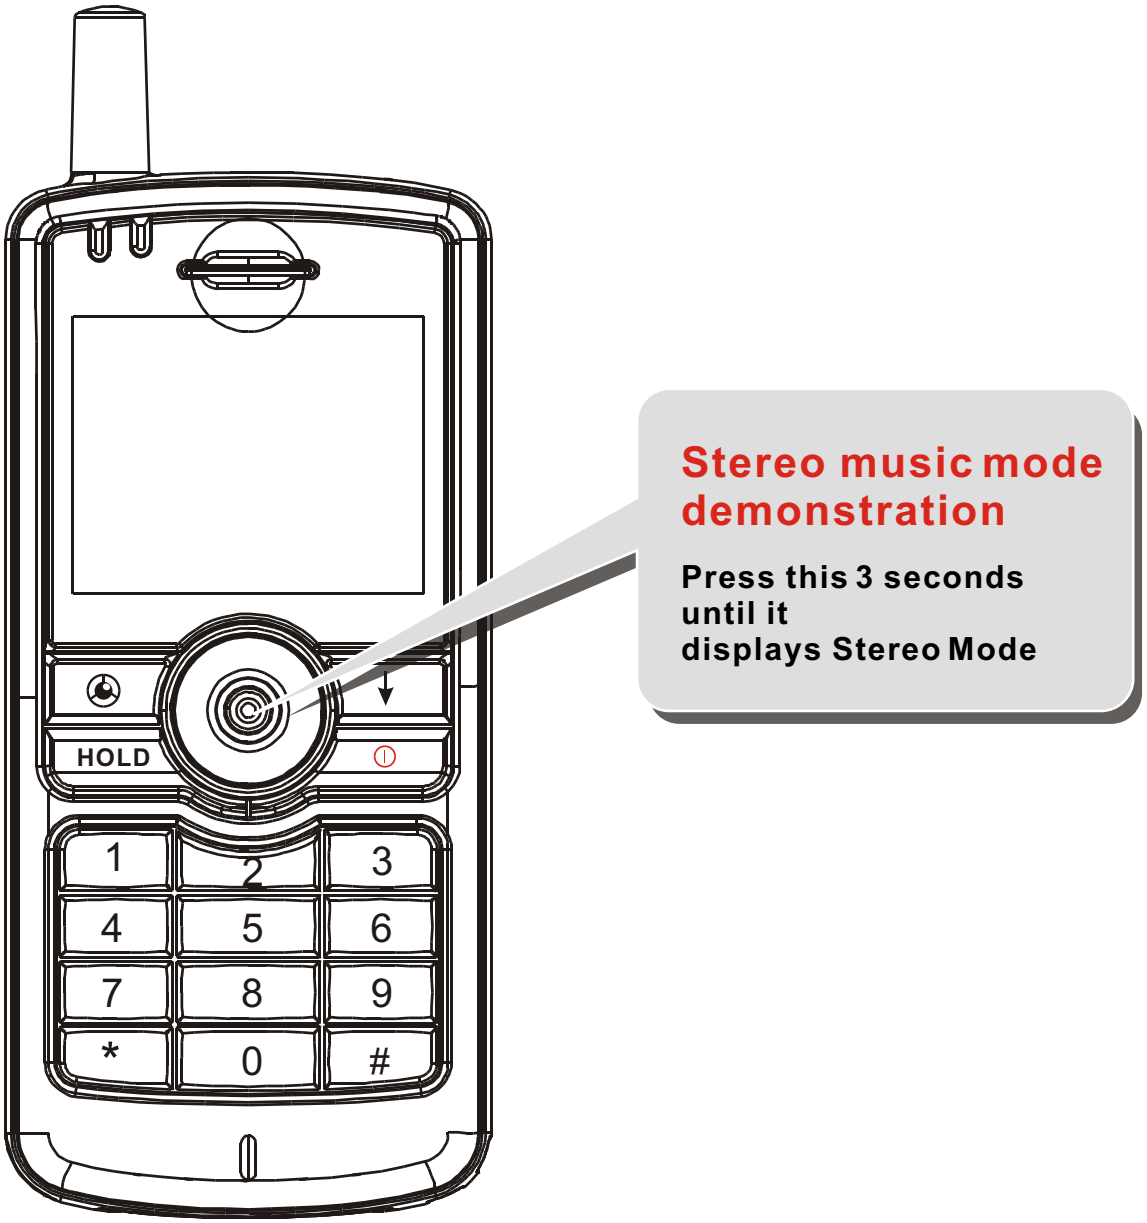

1. Music Pause and Play key

In the stereo mode, When playing music,
you could use "1" as "Pause/Play"

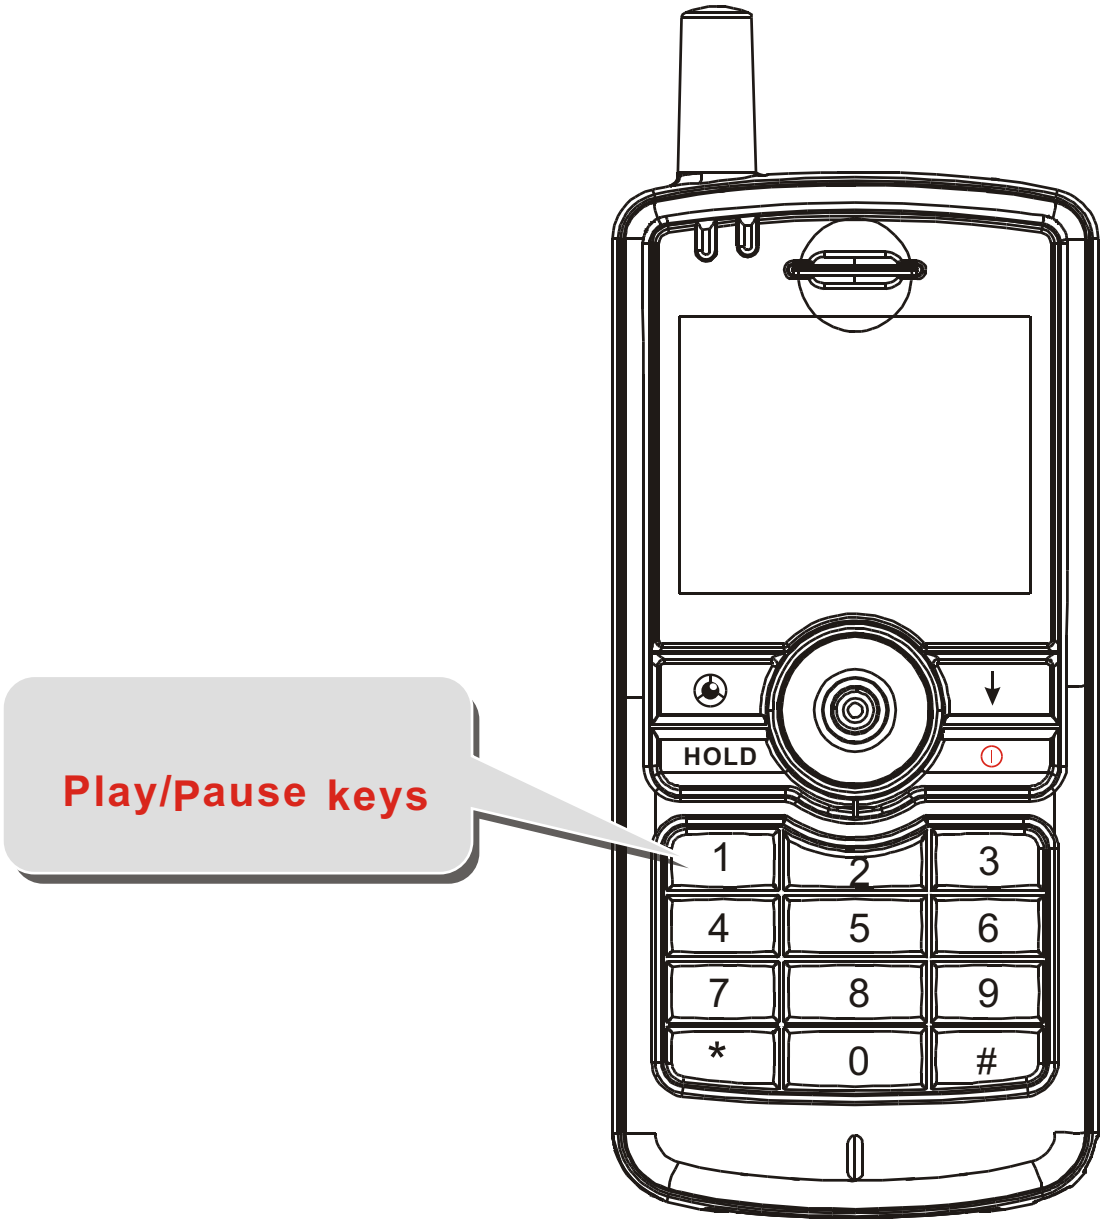

2. Previous/Next music switch over keys

When listening to the music in the stereo Mode you can switch to the previous or next music.

When cut to the previous one, press "*" ,
When pressing "#" , it will jump to the next one.

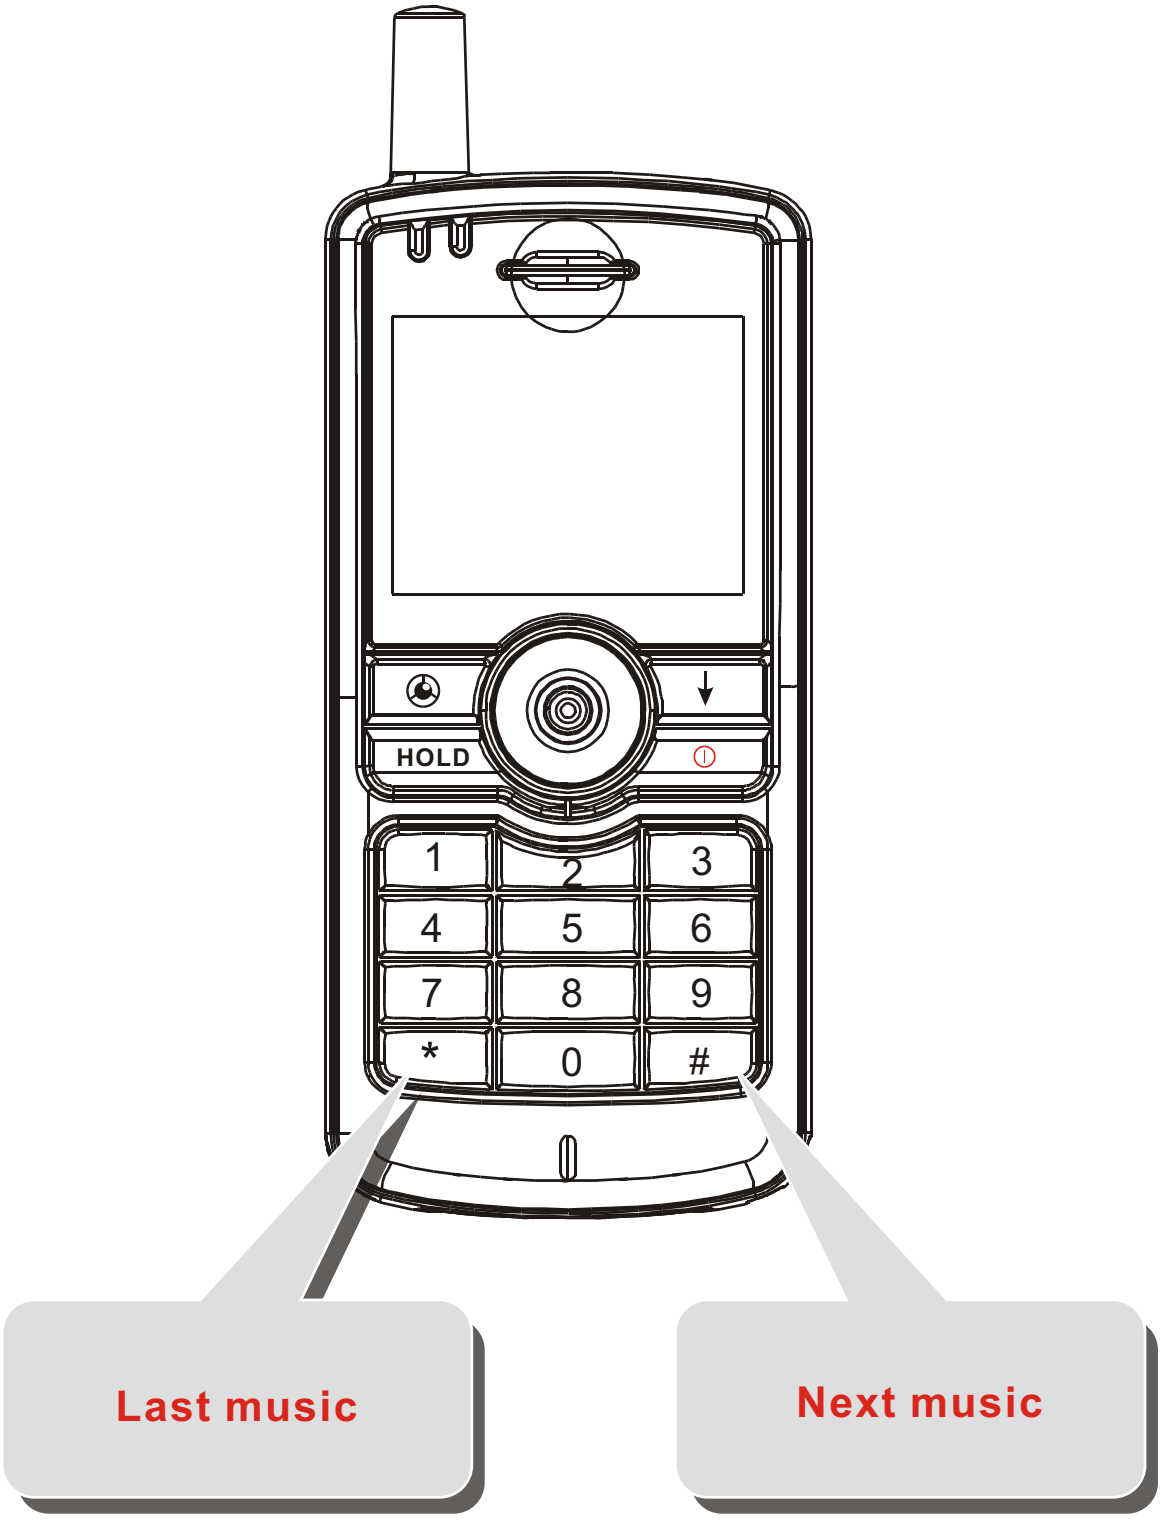

Telephone conversation pattern demonstration

If you want to come back to conversation press the "5 direct" key about 3 seconds. This time it restore and come back to the conversation mode

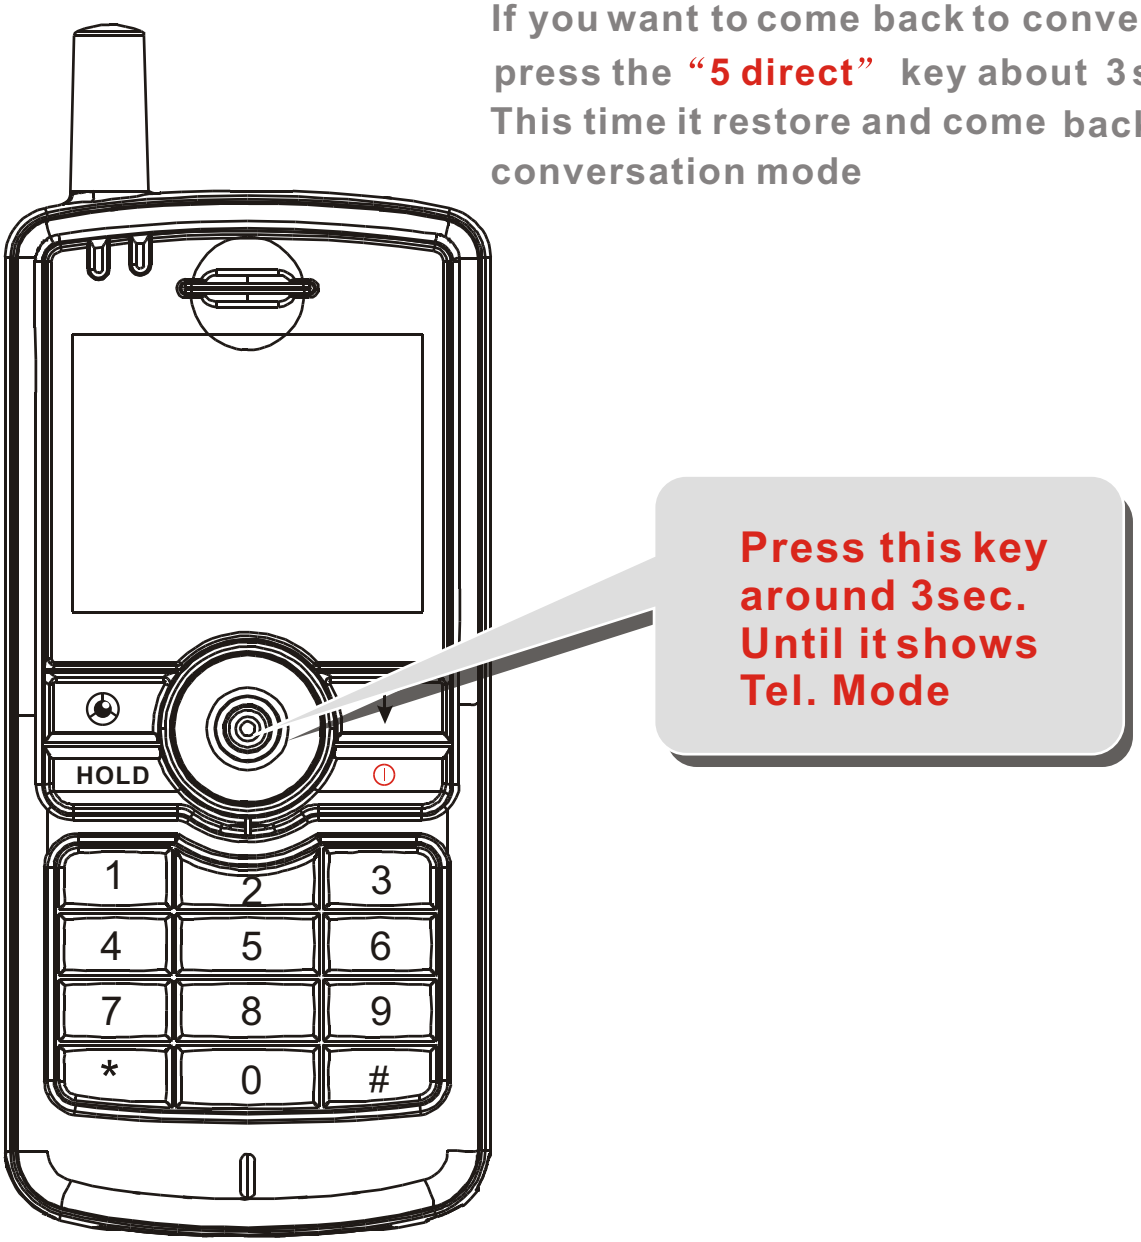

3. Incoming call in stereo Mode

In the stereo mode, if there is a skype calling, the media player will suspend automaticly, and shows the name of caller, until user to answer or reject.

4. Choice of answering

You can enter the telephone conversation mode after answering the call,you could choose to continue the call or by changing the working mode to restore the music you played before.

Choice of hungup

If you choose to hang up, it will come back to the stereo state. **Only to press "1" it will broadcast the previous music you cancelled.**

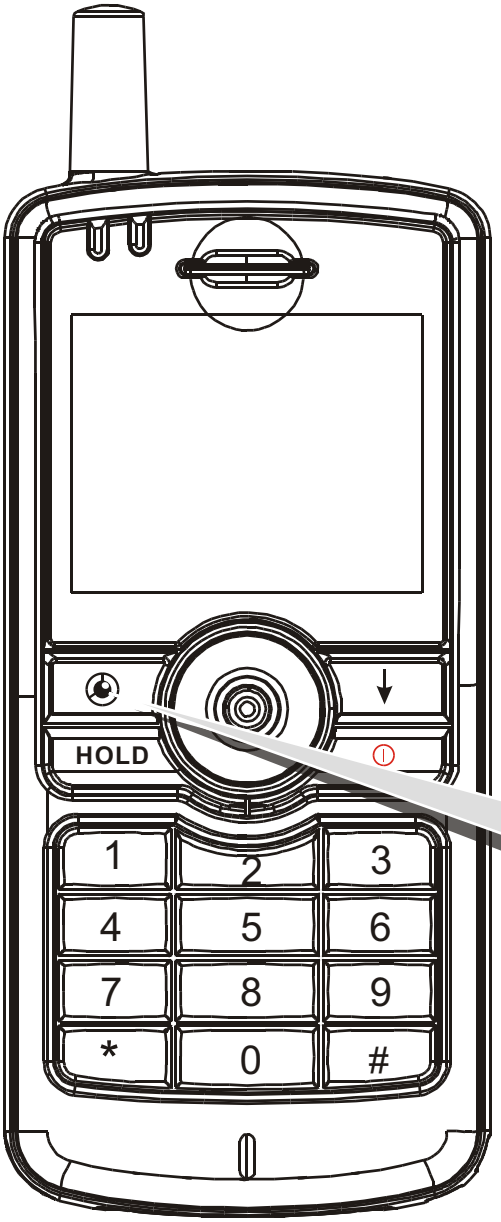

At present thiskey does not have any function, it will leave space for future development and upgrade

The elimination of common questions asked.

1.LCD glitters and 'searching'shows continuously

Ans: It beyond the communication area of the charger base, please get closer and try again.

2.LCD shows low battery, and 'beep'from the receiver the receiving phone

Ans: Please charge it on the charger base.

3. LCD shows mess code

Ans: LCD could display Chinese simplified and traditional characters, they will contradict each other.
Please choose the right working environment.

4.The charger light does not turn on when charging.

Ans:clean charger outlet and re-try

Frequency adjusting

If LCD display shows "Searching" but can not connect to VOIP when switch on the phone, press the keys below as showned to adjust the frequency.

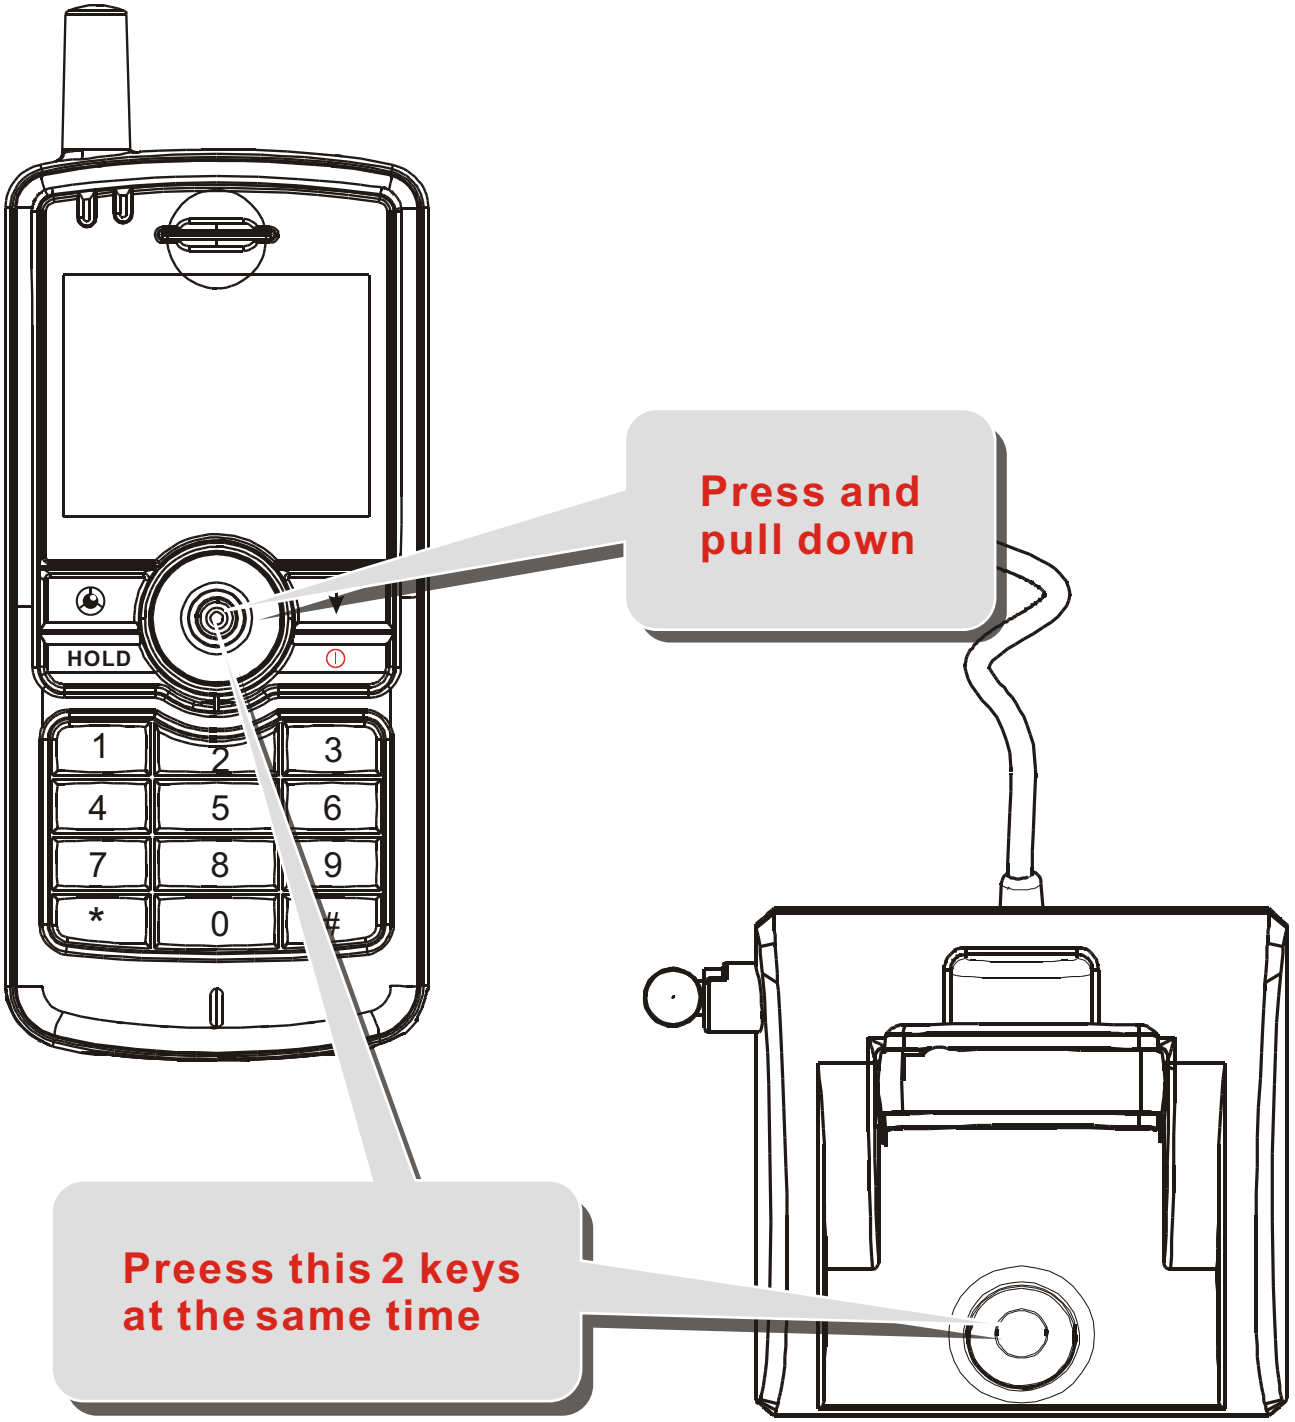

Installation and Operating System Announcements

Operating Support System:

Win2000(SP1-SP4)&Win(sp1-sp2)

The minimum Demand of Hardwave:

CPU:Intel pentium 4 or AMD K7 CPU(Suggest CPU speed 1GHz or above)

RAM:128MB

Hard Disk:Hard disk space rrquirement 50MB.

USB:USB1.1 or USB2.0

Skype:skype version 2.0 or above